


PIETBOON.collection

Instructions GERRIT dining table

Congratulations with your purchase.

Every product from the Piet Boon Collection is clearly recognisable by its sober, sturdy style and the use of natural and honest materials. Comfort, durability and a timeless design are the conditions which we place on each product. Our furniture is consciously finished in such a manner that in daily use it gains even more character. We hope you have a great deal of pleasure from your purchase.

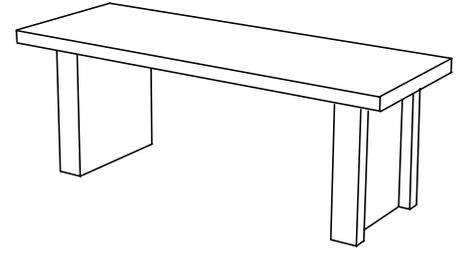

Product specifications

Material Solid oak or walnut top. Ecoplex legs with massive oak/ walnut toplayer.

	GERRIT dining table	
Dimensions (lxbxh)	180	180x80x76 cm
	220	220x100x76 cm
	270	270x100x76 cm
	320	320x100x76 cm
	380	380x110x76 cm

Piet Boon Collection reserves all rights for changes to the model
More product informatie can be found at www.pietboon.com

Maintenance

Wood

Our wood is used as naturally as possible. Because wood is a natural material our furniture will gain even more character during use and differences in structure or color can occur between the wooden components. This makes every product unique.

Natural characteristics of the wood, such as knots, blemishes and black spots are unavoidable. Open defects however may not be in view, but may be present on the underside of your table. The daylight in which the furniture is placed will determine the final color.

Avoid fluctuations in temperature and humidity; this can lead to wood warping whereby small top and dry cracks will occur over time. Ensure that the room temperature remains between 15 °C and 24 °C and the level of humidity between 40% and 60%. For this reason, do not place your furniture too close to a heat source.

Varnish

The varnishes reach their maximum hardness after two months. So handle your furniture with great care during the first months. The applied varnishes are scratch resistant. However, be careful with hard objects such as earthenware or your laptop.


Caution

- Only clean the furniture with a damp cloth.
- Remove spilt liquids immediately.
- Remove stains from wine, coffee, alcohol, etc. with concentrated washing-up liquid and a little water.
- Never use abrasives or other chemical cleaning products.
- Polishes can cause stains, which are difficult to remove.
- Do not place hot objects (pans, mugs etc.) directly on the wood. This causes rings which are impossible to remove.

Guarantee


See general terms & conditions.

Instructions **GERRIT dining table**

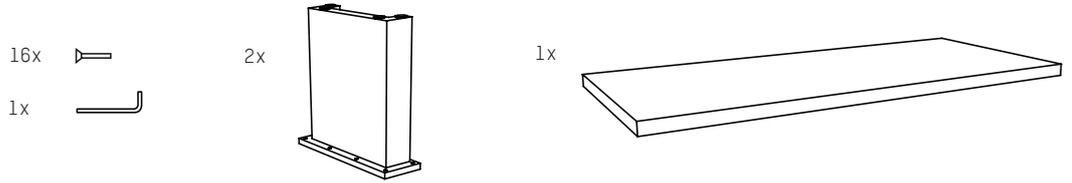

- The legs of the GERRIT 2200 and 2700 can be placed in different positions. This depends whether you prefer space at the head of the table or rather have more



space between the legs. In the illustration below these different leg positions are shown for the GERRIT 3200 and GERRIT 3800.

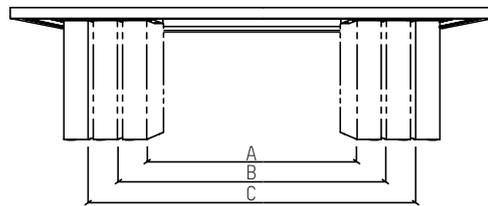

	A	B	C
GERRIT 2700	1250	1750	1930
GERRIT 2200	1250	1430	
GERRIT 1800	1250		

- Let the table top lie upside down on the package. This will prevent damaging the product.

- Place the leg on the table top as shown in the illustration. Fix the leg with the added screws on the table top.

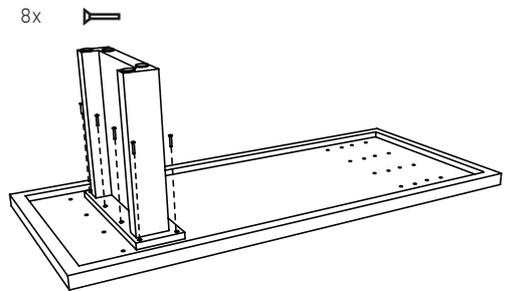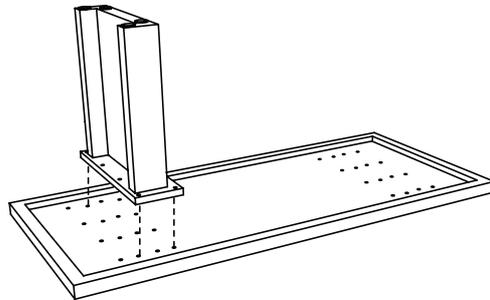

- Repeat this for the second leg.

- Turn the table on its legs.

